

**Connect to SSID
Zorarouter**



**Connect to SSID
ZoraHotspot_...**



USB connect




Reconnect




Stop



Reboot robot

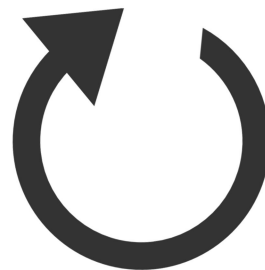

Volume up

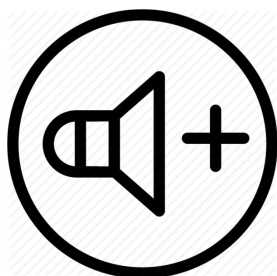

Volume down

